



FlashLink[®] NOW

Models 2239X, 2249X

Real-Time Logger

Quick Start Guide



Activation

Press and hold the green **START** button until the LCD displays **“START”**. You will also see a **Blue LED flash** to indicate a successful activation. The screen will then display the **CR** icon and temperature reading to indicate the RTL Logger is activated. Cellular network connection is indicated by the signal icon **4G**

* If the unit was not activated correctly, the screen will display **“SLEEP”** and the **Red and Blue LED will flash alternately 2 times**.



RTL Logger Placement Inside a Truck or Container

Attach the RTL Logger **on the top** or **chest high** on the side of the pallet using the double back foam tape on the back of the logger.

For best cellular connection during transport, the logger should be attached to **the last pallet facing the doors of the truck or container**.





DeltaTrak Corporate

📍 P.O. Box 398 Pleasanton CA 94566
☎️ (925) 249-2250 (800) 962-6776
💻 www.deltatrak.com

DTI Mexico International

📍 Guadalajara, Mexico
☎️ +52-33-3188-3161 / 36712190
💻 www.deltatramexico.com

DTI South America SA

📍 Santiago, Chile
☎️ +562 2946 5611 📠 +569 7477 1061
💻 www.deltatraksouthamerica.com

DTI China Limited

📍 Shenzhen China
☎️ +86-755-8442-9388/2837-2741
2837-2664 | 8923-2778
💻 www.deltatrakchina.com.cn

DTI Europe bvba

📍 Antwerp Belgium
☎️ +32 (0) 3-455-61-25
💻 www.deltatrakeurope.be

DTI Japan Limited

📍 Osaka, Japan
☎️ +81-6-6616-5900
💻 www.dtijapan.co.jp

DTI South Pacific

📍 Auckland, New Zealand
☎️ +64 21 880 133
💻 www.deltatraksouthpacific.com

DTI South Africa

📍 Western Cape, South Africa
☎️ +27 79 519 5047
💻 www.deltatrak.so.za