

# FlashLink<sup>®</sup> NOW

## 4G Real-Time In-Transit Logger

### Quick Start Guide

#### Activation

**Push and hold** the green **START** button for approximately 5 seconds. You will also see the recording icon and the temperature reading appear on the screen to indicate that the device has been activated properly.

\* If the unit was not activated correctly, the screen will display a battery icon.



#### Temperature Scale Toggle

Once the device is activated, the temperature scale on the LCD can be changed from Celsius or Fahrenheit by double clicking the start button.



#### Logger Placement (Inside the container or truck):

For best cellular connection during transport, attach the logger **on top of the pallet or chest high on the last pallet facing the truck or container doors.**

#### To Attach the Logger to the Pallet:

Attach RTL to the side of the pallet using the double back foam tape on the back of the shipping card



25D3

