




# FlashCheck®

Model 11082  
*Jumbo Display Auto-Cal Blunt Probe Thermometer*



## Features

---

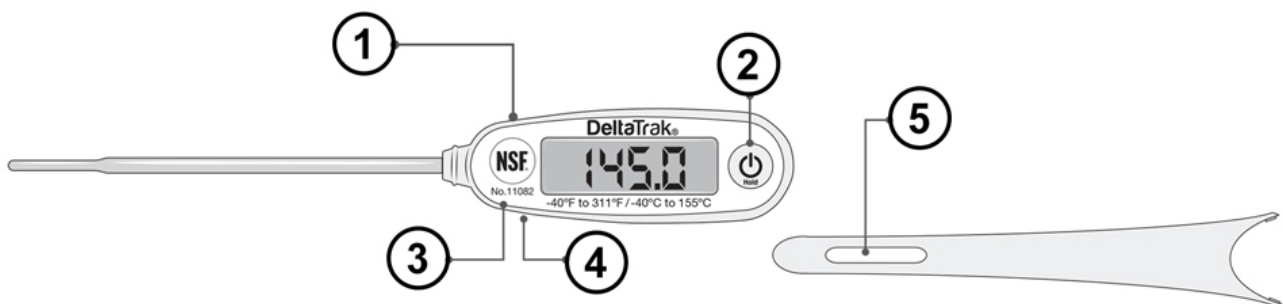

- 1.** O-ring sealed construction is the secret to superior strength and durability of the casing.
- 2.** Hold feature freezes display reading until pressed again or power is off.
- 3.** Smooth membrane surface and Touch-Pad efficiently seal against water, dirt, grease, and other intrusions.
- 4.** Indicates CAL, °C/°F buttons
- 5.** Slotted Chamber-Lock Sheath magnetically holds thermometer in place on a register or tool box.

# Calibration

---

## **Important: Read notes below before proceeding**

Fill a cup with crushed ice, add cold water to 1/2 inch below the ice. Stir and let it sit for two minutes for temperature to stabilize.

- 1.** Turn on the thermometer and set for °C or °F scale.
- 2.** Place probe tip in center of cup making sure tip is fully submerged but not in contact with cup surface. Stir for a minimum of 15 seconds.
- 3.** Keep probe tip completely submerged, press and hold "CAL" button for 2 seconds until "CAL" appears on the LCD display, then release.
- 4.** Calibration is complete when display automatically returns to normal operation mode.

## Notes:

---

- Probe tip must be fully submerged in the ice water during calibration procedure
- After "CAL" appears on the LCD display, thermometer will automatically:
  - A.** Take readings until a stable set of readings has been recorded
  - B.** Display last 3 readings with a "C" before the number
  - C.** Complete calibration and return to operation mode
- If "Err 1" appears on the LCD display, your first reading is greater than 35.6°F (2°C). To clear, shut off thermometer and start again.
- If "Err2" appears on the LCD display, the average reading was outside the  $\pm 0.54^{\circ}\text{F}$  ( $0.3^{\circ}\text{C}$ ) tolerance range. To clear, shut off the thermometer and start again.
- **Calibration Procedure:** [www.deltatruk.com/resources/video](http://www.deltatruk.com/resources/video)

### DeltaTrak Corporate

📍 P.O. Box 398 Pleasanton CA 94566

☎ (925) 249-2250 (800) 962-6776

💻 [www.deltatrak.com](http://www.deltatrak.com)

### DTI South America SA

📍 Santiago, Chile

☎ +562 2758 2866 📠 +569 7477 1061

💻 [www.deltatraksouthamerica.com](http://www.deltatraksouthamerica.com)

### DTI Europe bvba

📍 Antwerp Belgium

☎ +32 (0) 3-455-61-25

💻 [www.deltatrakeurope.be](http://www.deltatrakeurope.be)

### DTI Asia Pacific

📍 NT, Hong Kong

☎ +852-3568-5538

💻 [www.dtiap.com](http://www.dtiap.com)

### DTI South Africa

📍 Western Cape, South Africa

☎ +46 76 645 0130

💻 [www.deltatrak.co.za](http://www.deltatrak.co.za)

### DTI Mexico International

📍 Guadalajara, Mexico

☎ +52-33-3188-3161 / 36712190

💻 [www.deltatramexico.com](http://www.deltatramexico.com)

### DTI China Limited

📍 Shenzhen China

☎ +86-755-8442-9388/2837-2741

2837-2664 | 8923-2778

💻 [www.deltatrakchina.com.cn](http://www.deltatrakchina.com.cn)

### DTI Japan Limited

📍 Osaka, Japan

☎ +81-6-6616-5900

💻 [www.dtijapan.co.jp](http://www.dtijapan.co.jp)

### DTI South Pacific

📍 Auckland, New Zealand

☎ +64 9 5757 886

💻 [www.deltatraksouthpacific.com](http://www.deltatraksouthpacific.com)